
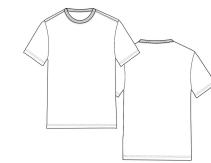


**KOHL'S****SP26****Stage: DEVELOPMENT****MS11K200**  
**THE ESSENTIAL TEE**  
Tech Spec Overview

| Brand          | SONOMA | Division     | MENS | Request No.     | 00750638       | Create Date | 2025-05-06      | Cut Date      |            |
|----------------|--------|--------------|------|-----------------|----------------|-------------|-----------------|---------------|------------|
| X-Factory Date |        | Product Type | TOPS | Product Manager | BRANT HOFFMANN | Designer    | LILLIAN BENITEZ | Tech Designer | ANN MORROW |

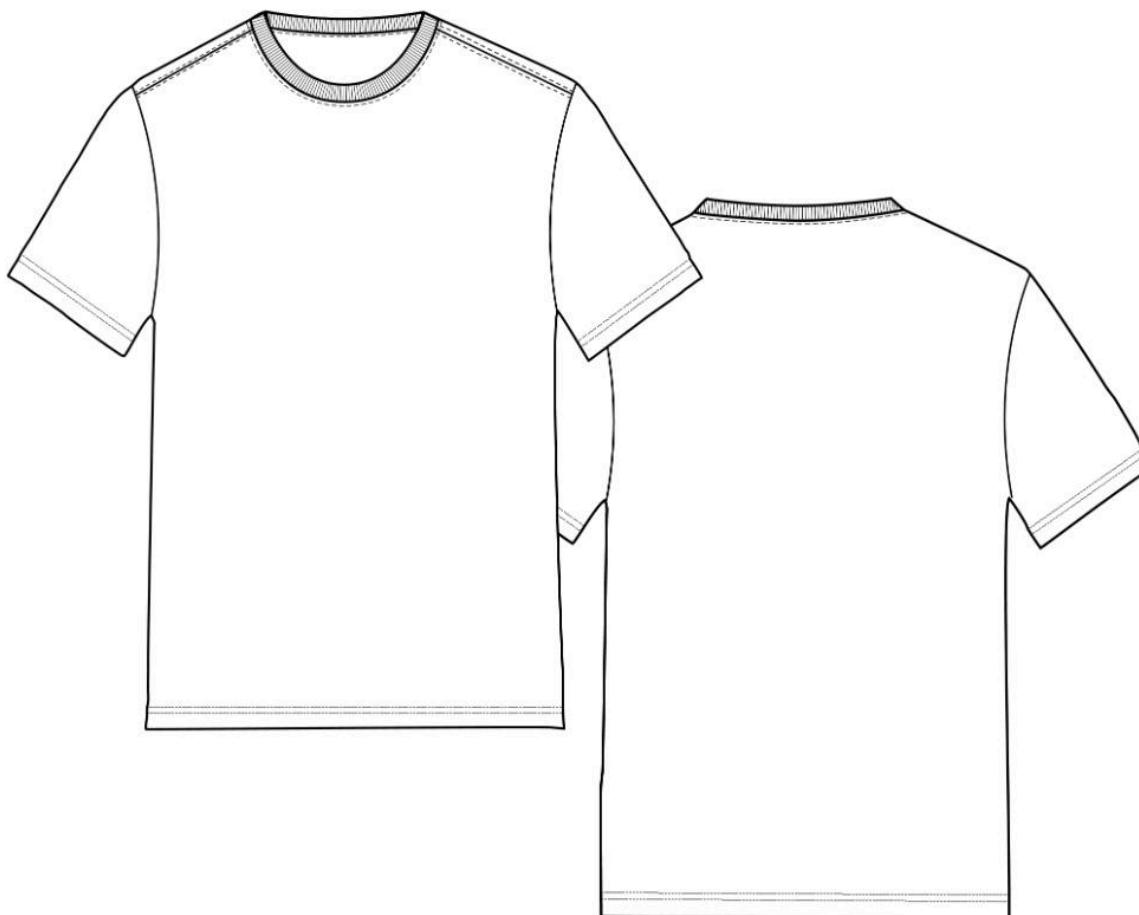


Modified By: TKA01LV on 2025-05-06


Print Date/Time: 11/11/2025 09:56 AM

1 of 24

CONFIDENTIALITY NOTICE: This document is property of Kohl's, Inc.

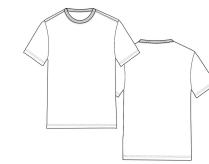

|                |        |              |      |                 |                |             |                 |               |            |
|----------------|--------|--------------|------|-----------------|----------------|-------------|-----------------|---------------|------------|
| Brand          | SONOMA | Division     | MENS | Request No.     | 00750638       | Create Date | 2025-05-06      | Cut Date      |            |
| X-Factory Date |        | Product Type | TOPS | Product Manager | BRANT HOFFMANN | Designer    | LILLIAN BENITEZ | Tech Designer | ANN MORROW |

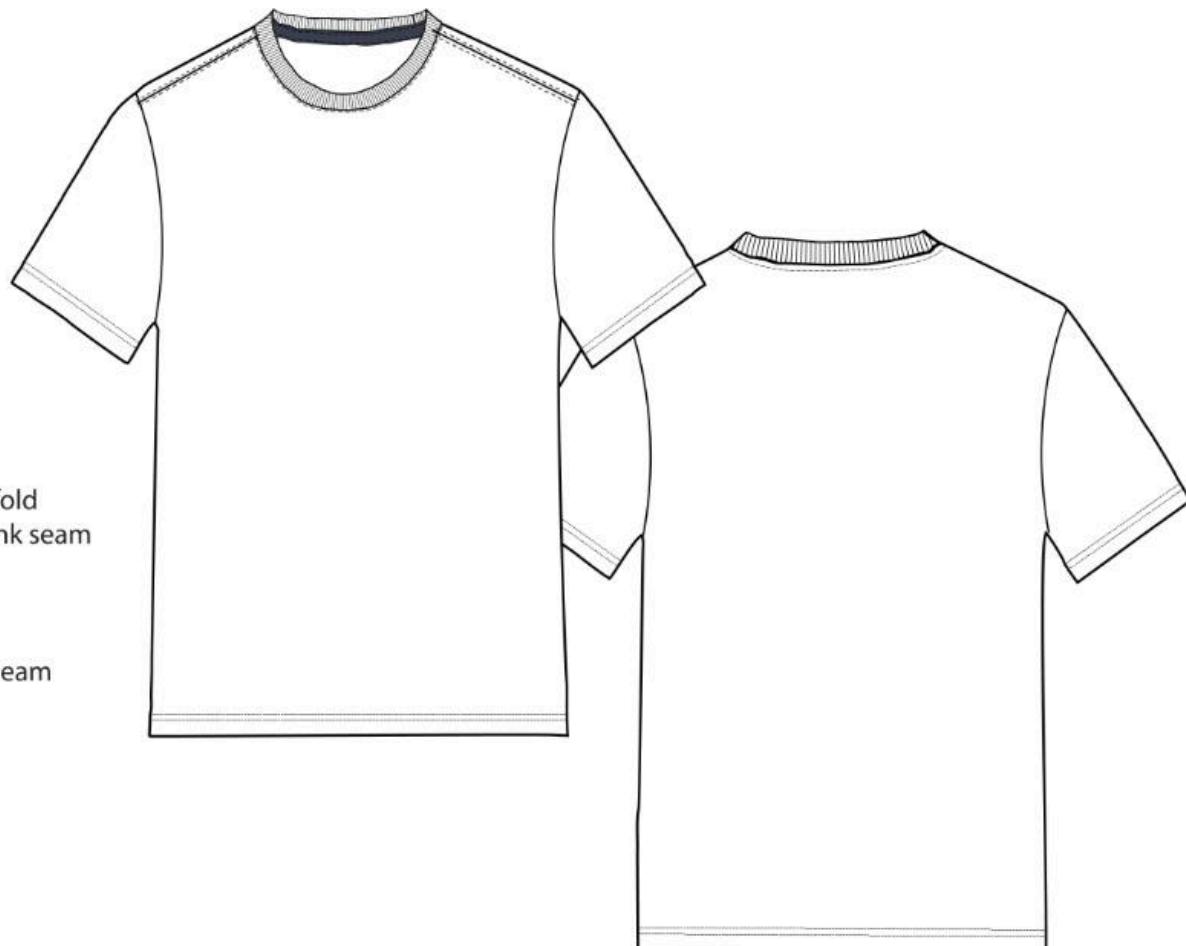

## Neck:

- Trim is 2-ply, set-in circular
- Miter 1/2" behind W.L. HPS fold
- Apply 401 1/16" SNCS, blw nk seam
- Bk nk tape - SEE DETAIL -


## Shoulder:

- 1/4" 2N/Stitching, straddle seam

## Sleeve/Sweep Hem:

- Single Turn, set circular
- Apply 1/4" 406 2NC


Modified By: TK23624 on 2025-06-05

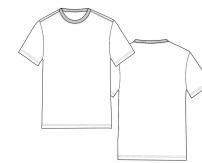

|                |        |              |      |                 |                |             |                 |               |            |
|----------------|--------|--------------|------|-----------------|----------------|-------------|-----------------|---------------|------------|
| Brand          | SONOMA | Division     | MENS | Request No.     | 00750638       | Create Date | 2025-05-06      | Cut Date      |            |
| X-Factory Date |        | Product Type | TOPS | Product Manager | BRANT HOFFMANN | Designer    | LILLIAN BENITEZ | Tech Designer | ANN MORROW |

## BACK NECK TAPE:

Clean set w/401 2NTS,  
tape extends shoulder to shoulder  
following the forward shoulder

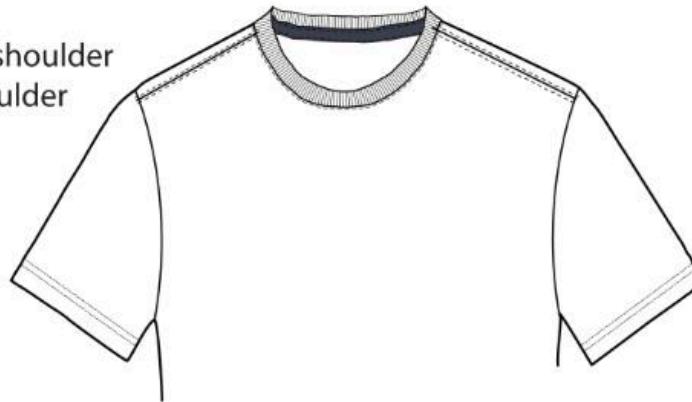

Modified By: TK23624 on 2025-06-05

# S - DOUBLE DYE SOLID

MS11K200

THE ESSENTIAL TEE

|                |                |        |        |        |        |        |
|----------------|----------------|--------|--------|--------|--------|--------|
| Suffix:        | RS, XS, RN, XN | RS, XS |
| Month:         |                |        |        |        |        |        |
| Meeting Needs: | COUNTER SAMPLE |        |        |        |        |        |
|                |                |        |        |        |        |        |

## MATERIALS & TRIMS

| Image | Supplier Ref#      | Mtrl ID | Component   | Additional Info / Size | Finish / Wash  | Position | Supplier / Mill        | QTY | AVAILABLE              | BRNT CHERY                               | FOREST NGT                  | MINERL NNVY                              | NEW BLACK                     | NEW WHITE                     |  |
|-------|--------------------|---------|---|------------------------|----------------|----------|------------------------|-----|------------------------|--|-----------------------------|--|-------------------------------|-------------------------------|--|
|       | SJ-CVC-150-RF-3987 | 90714   | K 60/40 COTTON/POLYESTER SINGLE-JERSEY 150.00 GM2 | BODY FABRIC            | COMPACT<br>... | BODY     | KNIT ASIA LIMITED MILL |     | AVAILABLE<br>AVAILABLE | 103-930<br>BURNT CHERRY<br>ATLAS 103-930 | FOREST NIGHT<br>19-0414 TCX | 654-970<br>MINERAL NAVY<br>ATLAS 654-970 | NEW BLACK - COTTON<br>210-120 | NEW WHITE - COTTON<br>212-155 |  |
|       | GENERIC            | 64229   | THREAD  |                        |                | BODY     |                        |     | AVAILABLE<br>AVAILABLE | 103-930<br>BURNT CHERRY<br>ATLAS 103-930 | FOREST NIGHT<br>19-0414 TCX | DTM GROUND - MINERL NNVY                 | DTM GROUND - NEW BLACK        | DTM GROUND - NEW WHITE        |  |
|       |                    |         | RIB 1X1   |                        | COLLAR         |          |                        |     | AVAILABLE<br>AVAILABLE | 103-930<br>BURNT CHERRY<br>ATLAS 103-930 | FOREST NIGHT<br>19-0414 TCX | DTM GROUND - MINERL NNVY                 | DTM GROUND - NEW BLACK        | DTM GROUND - NEW WHITE        |  |

**S - DOUBLE DYE SOLID****MS11K200****THE ESSENTIAL TEE**

|                |                |           |        |        |        |        |
|----------------|----------------|-----------|--------|--------|--------|--------|
| Suffix:        | RS, XS, RN, XN | RS, XS    | RS, XS | RS, XS | RS, XS | RS, XS |
| Month:         |                |           |        |        |        |        |
| Meeting Needs: | COUNTER SAMPLE |           |        |        |        |        |
|                |                |           |        |        |        |        |
|                |                | Colorways |        |        |        |        |

**LABELS**

| Image | Supplier Ref# | Mtrl ID | Component                | Additional Info / Size | Finish / Wash | Position | Supplier / Mill | QTY | AVAILABLE | BRNT CHERY | FOREST NGT | MINERL NVY | NEW BLACK | NEW WHITE |
|-------|---------------|---------|--------------------------|------------------------|---------------|----------|-----------------|-----|-----------|------------|------------|------------|-----------|-----------|
|       |               | 126863  | SN ISS - SN<br>SN_ISS    | INTEGRATED SIZE STRIP  |               |          |                 |     |           |            |            |            |           |           |
|       |               | 127078  | SN HS - SN<br>SN HS      | GENERIC HEATSEAL       |               |          |                 |     |           |            |            |            |           |           |
|       |               | 127248  | NB UPC LL - PU NB UPC LL | UPC LABEL              |               |          |                 |     |           |            |            |            |           |           |
|       |               | 126925  | NB CCL - PU<br>NB CCL    | CARE CONTENT LABEL     |               |          |                 |     |           |            |            |            |           |           |

**S - DOUBLE DYE SOLID****MS11K200****THE ESSENTIAL TEE**

|                |                |           |        |        |        |        |
|----------------|----------------|-----------|--------|--------|--------|--------|
| Suffix:        | RS, XS, RN, XN | RS, XS    | RS, XS | RS, XS | RS, XS | RS, XS |
| Month:         |                |           |        |        |        |        |
| Meeting Needs: | COUNTER SAMPLE |           |        |        |        |        |
|                |                |           |        |        |        |        |
|                |                | Colorways |        |        |        |        |

**PACKAGING**

| Image | Supplier Ref# | Mtrl ID | Component  | Additional Info / Size    | Finish / Wash | Position | Supplier / Mill | QTY | AVAILABLE | BRNT CHERY | FOREST NGT | MINERL NVY | NEW BLACK | NEW WHITE |
|-------|---------------|---------|------------|---------------------------|---------------|----------|-----------------|-----|-----------|------------|------------|------------|-----------|-----------|
|       |               | 128203  | NB GLPB ST | GUM LABEL POLYBAG STICKER |               |          |                 |     |           |            |            |            |           |           |
|       |               | 31139   | 11X13 FOLD | FOLD                      |               |          |                 |     |           |            |            |            |           |           |

**RN - SINGLE DYE****MS11K200****THE ESSENTIAL TEE**

|                  |                   |        |
|------------------|-------------------|--------|
| Suffix:          | RS, XS, RN,<br>XN | RN, XN |
| Month:           |                   |        |
| Meeting Needs:   | COUNTER<br>SAMPLE |        |
|                  |                   |        |
| <b>Colorways</b> |                   |        |

**MATERIALS & TRIMS**

| Image | Supplier Ref#        | Mtrl ID | Component   | Additional Info / Size | Finish / Wash | Position | Supplier / Mill         | QTY | AVAILABLE              | CHARCOAL                                |
|-------|----------------------|---------|---|------------------------|---------------|----------|-------------------------|-----|------------------------|---|
|       | 2312102-02<br>(B03F) | 114060  | K 60/40<br>COTTON/<br>POLYESTER<br>JERSEY<br>150.00 GM2 | BODY<br>FABRIC         |               | BODY     | TEXTILES<br>SOLAFE S.A. |     | AVAILABLE<br>AVAILABLE | B65 VOL 52<br>B65                       |
|       | GENERIC              | 64229   | THREAD  |                        |               | BODY     |                         |     | AVAILABLE<br>AVAILABLE | DTM TO<br>GROUND<br>COLOR -<br>CHARCOAL |
|       |                      |         |   | 1X1 RIB                |               | COLLAR   |                         |     | AVAILABLE<br>AVAILABLE | DTM TO<br>GROUND<br>COLOR -<br>CHARCOAL |

**RN - SINGLE DYE****MS11K200****THE ESSENTIAL TEE**

|                  |                   |        |
|------------------|-------------------|--------|
| Suffix:          | RS, XS, RN,<br>XN | RN, XN |
| Month:           |                   |        |
| Meeting Needs:   | COUNTER<br>SAMPLE |        |
|                  |                   |        |
| <b>Colorways</b> |                   |        |

**LABELS**

| Image | Supplier Ref# | Mtrl ID | Component             | Additional Info / Size   | Finish / Wash | Position | Supplier / Mill | QTY | AVAILABLE | CHARCOAL |
|-------|---------------|---------|-----------------------|--------------------------|---------------|----------|-----------------|-----|-----------|----------|
|       |               | 126863  | SN ISS - SN<br>SN_ISS | INTEGRATED<br>SIZE STRIP |               |          |                 |     |           |          |
|       |               | 127078  | SN HS - SN<br>SN HS   | GENERIC<br>HEATSEAL      |               |          |                 |     |           |          |

|  |  |        |                                |                          |  |  |  |  |  |
|--|--|--------|--------------------------------|--------------------------|--|--|--|--|--|
|  |  | 127248 | NB UPC LL -<br>PU NB UPC<br>LL | UPC LABEL                |  |  |  |  |  |
|  |  | 126925 | NB CCL - PU<br>NB CCL          | CARE<br>CONTENT<br>LABEL |  |  |  |  |  |

## RN - SINGLE DYE

MS11K200

THE ESSENTIAL TEE

|                |                   |        |
|----------------|-------------------|--------|
| Suffix:        | RS, XS, RN,<br>XN | RN, XN |
| Month:         |                   |        |
| Meeting Needs: | COUNTER<br>SAMPLE |        |
|                |                   |        |

### PACKAGING

| Image | Supplier Ref# | Mtrl ID    | Component                  | Additional Info / Size | Finish / Wash | Position | Supplier / Mill | QTY | AVAILABLE | CHARCOAL |
|-------|---------------|------------|----------------------------|------------------------|---------------|----------|-----------------|-----|-----------|----------|
|       | 128203        | NB GLPB ST | ECOM<br>POLYBAG<br>STICKER |                        |               |          |                 |     |           |          |
|       | 31139         | 11X13 FOLD | FOLD                       |                        |               |          |                 |     |           |          |

## RH - HEATHER

Suffix:

MS11K200

Month:

THE ESSENTIAL TEE

Meeting Needs:

### MATERIALS & TRIMS

| Image | Supplier Ref#      | Mtrl ID | Component  | Additional Info / Size | Finish / Wash  | Position | Supplier / Mill           | QTY | Colorways |  |
|-------|--------------------|---------|--|------------------------|----------------|----------|---------------------------|-----|-----------|--|
|       | SJ-CVC-150-RF-3987 | 90714   | K 60/40<br>COTTON/<br>POLYESTER<br>SINGLE-<br>JERSEY<br>150.00 GM2 | MID: 90714             | COMPACT<br>,,, | BODY     | KNIT ASIA<br>LIMITED MILL |     |           |  |
|       | GENERIC            | 64229   | THREAD   |                        |                | BODY     |                           |     |           |  |
|       |                    |         |  | 1X1 RIB                |                | COLLAR   |                           |     |           |  |

**RH - HEATHER****MS11K200****THE ESSENTIAL TEE**

Suffix:

Month:

Meeting Needs:

| LABELS |               |                                |                          | Colorways              |               |          |                 |     |
|--------|---------------|--------------------------------|--------------------------|------------------------|---------------|----------|-----------------|-----|
| Image  | Supplier Ref# | Mtrl ID                        | Component                | Additional Info / Size | Finish / Wash | Position | Supplier / Mill | QTY |
|        | 126863        | SN ISS - SN<br>SN_ISS          | INTEGRATED<br>SIZE STRIP |                        |               |          |                 |     |
|        | 127078        | SN HS - SN<br>SN HS            | GENERIC<br>HEATSEAL      |                        |               |          |                 |     |
|        | 127248        | NB UPC LL -<br>PU NB UPC<br>LL | UPC LABEL                |                        |               |          |                 |     |
|        | 126925        | NB CCL - PU<br>NB CCL          | CARE<br>CONTENT<br>LABEL |                        |               |          |                 |     |

**RH - HEATHER****MS11K200****THE ESSENTIAL TEE**

Suffix:

Month:

Meeting Needs:


| PACKAGING |               |            |                            | Colorways              |               |          |                 |     |
|-----------|---------------|------------|----------------------------|------------------------|---------------|----------|-----------------|-----|
| Image     | Supplier Ref# | Mtrl ID    | Component                  | Additional Info / Size | Finish / Wash | Position | Supplier / Mill | QTY |
|           | 128203        | NB GLPB ST | ECOM<br>POLYBAG<br>STICKER |                        |               |          |                 |     |
|           | 31139         | 11X13 FOLD | FOLD                       |                        |               |          |                 |     |

KOHL'S


SP26

Stage: DEVELOPMENT

**MS11K200**  
**THE ESSENTIAL TEE**  
 Points of Measure

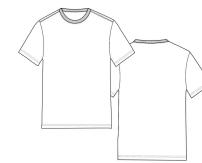

| POM Page Description: |               |  |      | APPAREL.LINKS.R.JERSEY |         |            |               |   |          |            |        |                |         |  |  |  |  |  |  |  |  |  |
|-----------------------|---------------|--|------|------------------------|---------|------------|---------------|---|----------|------------|--------|----------------|---------|--|--|--|--|--|--|--|--|--|
| Brand                 | SONOMA        | Division   | MENS | Customer               | MENS    |            | Tech Designer | ANN MORROW  | Business | SPORTSWEAR |        | Size Indicator | REGULAR |  |  |  |  |  |  |  |  |  |
| FORM1                 |               | KOS-MMN040H-1604   |      |                        |         | FORM2      |               |   |          |            |        |                |         |  |  |  |  |  |  |  |  |  |
| Grade Table           |               | MENS TOPS ALPHA/NUMERIC  |      |                        |         |            |               |   |          |            |        |                |         |  |  |  |  |  |  |  |  |  |
| Material 1            | 114060        | K 60/40 COTTON/POLYESTER JERSEY 150.00 GM2                       |      |                        |         | Material 2 | 90714         | K 60/40 COTTON/POLYESTER SINGLE-JERSEY 150.00 GM2 |          |            |        |                |         |  |  |  |  |  |  |  |  |  |
| P/S                   | POM Code      | POM Description  |      |                        | TOL (-) | TOL (+)    | 34            | 36  | 40       | 43         | 47     | 51             | 55      |  |  |  |  |  |  |  |  |  |
| P                     | A001-MNT-3PRG | MENS 3" PRG ALPHA XS=34, S=36, M=40, L=43, XL=47, 2XL=51, 3XL=55 |      |                        |         |            |               |   |          |            |        |                |         |  |  |  |  |  |  |  |  |  |
| P                     | A122          | MINIMUM HEAD STRETCH   |      |                        | 0       |            | 24            | 24  | 25       | 25         | 25     | 25             | 25      |  |  |  |  |  |  |  |  |  |
| P                     | A300          | LEN HPS TO HEM   |      |                        | -1/2    | 1/2        | 27 1/2        | 28  | 28 1/2   | 29 1/4     | 30     | 30 1/2         | 31      |  |  |  |  |  |  |  |  |  |
|                       | A151          | FORWARD SHLDR SEAM @HPS-STRAIGHT-DEV ONLY                        |      |                        | -1/8    | 1/8        |               |   | 1/2      |            |        |                |         |  |  |  |  |  |  |  |  |  |
| P                     | A100          | NK WIDTH@SEAM  |      |                        | -1/4    | 1/4        | 6 1/2         | 6 3/4   | 7        | 7 1/4      | 7 1/2  | 7 3/4          | 8 1/4   |  |  |  |  |  |  |  |  |  |
| P                     | A110          | FRT NK DROP@SEAM   |      |                        | -1/8    | 1/8        | 4 3/8         | 4 1/2   | 4 5/8    | 4 3/4      | 4 7/8  | 5              | 5 1/4   |  |  |  |  |  |  |  |  |  |
|                       | A120          | BK NK DROP@SEAM  |      |                        | -1/8    | 1/8        | 3/4           | 7/8   | 7/8      | 7/8        | 1      | 1              | 1 1/8   |  |  |  |  |  |  |  |  |  |
|                       | A124          | NK TRIM HGT  |      |                        | -1/8    | 1/8        | 5/8           | 5/8   | 5/8      | 5/8        | 5/8    | 5/8            | 5/8     |  |  |  |  |  |  |  |  |  |
| P                     | A250          | ACROSS SHOULDER  |      |                        | -3/8    | 3/8        | 16 1/4        | 16 7/8  | 17 3/4   | 18 1/2     | 19 1/2 | 20 1/2         | 21 1/2  |  |  |  |  |  |  |  |  |  |
|                       | A253          | XFRT/BK PLCMT #'' FM HPS   |      |                        | 0       | 0          | 7             | 7 1/4   | 7 1/2    | 7 3/4      | 8      | 8 1/4          | 8 1/2   |  |  |  |  |  |  |  |  |  |
|                       | A254          | ACROSS FRONT   |      |                        | -3/8    | 3/8        | 14            | 14 5/8  | 15 1/2   | 16 1/4     | 17 1/4 | 18 1/4         | 19 1/4  |  |  |  |  |  |  |  |  |  |
|                       | A255          | ACROSS BACK  |      |                        | -3/8    | 3/8        | 15            | 15 5/8  | 16 1/2   | 17 1/4     | 18 1/4 | 19 1/4         | 20 1/4  |  |  |  |  |  |  |  |  |  |
| P                     | A260H         | CHEST 1" BLW AH RLXD-1/2 MEAS                                    |      |                        | -1/2    | 1/2        | 17 1/2        | 18 3/4  | 20 1/2   | 22         | 24     | 26             | 28      |  |  |  |  |  |  |  |  |  |
| P                     | A290H         | SWEEP RLXD@HEM-1/2 MEAS  |      |                        | -1/2    | 1/2        | 17 1/2        | 18 3/4  | 20 1/2   | 22         | 24     | 26             | 28      |  |  |  |  |  |  |  |  |  |
|                       | A568          | BTTM HEM HGHT  |      |                        | -1/8    | 1/8        | 3/4           | 3/4   | 3/4      | 3/4        | 3/4    | 3/4            | 3/4     |  |  |  |  |  |  |  |  |  |
| P                     | A330          | ARMHOLE DROP-FROM HPS  |      |                        | -1/4    | 1/4        | 10 1/4        | 10 1/2  | 10 3/4   | 11         | 11 1/4 | 11 5/8         | 12      |  |  |  |  |  |  |  |  |  |
| P                     | A360-1B       | SLV LEN FROM CB NK-S/SLV   |      |                        | -1/4    | 1/4        | 16 1/2        | 16 3/4  | 17 1/2   | 18 1/8     | 18 7/8 | 19 5/8         | 20 3/8  |  |  |  |  |  |  |  |  |  |
|                       | A352H-1B      | SLV OPENING RLXD-1/2 MEAS S/SLV                                  |      |                        | -1/4    | 1/4        | 6 1/4         | 6 5/8   | 7        | 7 3/8      | 7 7/8  | 8 3/8          | 8 3/4   |  |  |  |  |  |  |  |  |  |
|                       | A359          | SLV HEM HGHT   |      |                        | -1/8    | 1/8        | 3/4           | 3/4   | 3/4      | 3/4        | 3/4    | 3/4            | 3/4     |  |  |  |  |  |  |  |  |  |
|                       | A010          | DEVELOPMENT ONLY   |      |                        |         |            |               |   |          |            |        |                |         |  |  |  |  |  |  |  |  |  |
|                       | A150          | SHLDR SLOPE - DEV ONLY   |      |                        | -1/8    | 1/8        |               |   | 2        |            |        |                |         |  |  |  |  |  |  |  |  |  |

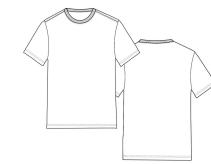**KOHL'S****SP26****Stage: DEVELOPMENT****MS11K200  
THE ESSENTIAL TEE  
Points of Measure**


| FORM1             |          | KOS-MMN040H-1604                                  |         |         |        | FORM2            |        |   |        |        |        |  |  |  |
|-------------------|----------|---|---------|---------|--------|------------------|--------|---|--------|--------|--------|--|--|--|
| Grade Table       |          | MENS TOPS ALPHA/NUMERIC                           |         |         |        |                  |        |   |        |        |        |  |  |  |
| Material 1 114060 |          | K 60/40 COTTON/POLYESTER JERSEY 150.00 GM2        |         |         |        | Material 2 90714 |        | K 60/40 COTTON/POLYESTER SINGLE-JERSEY 150.00 GM2 |        |        |        |  |  |  |
| P/S               | POM Code | POM Description                                   | TOL (-) | TOL (+) | 34     | 36               | 40     | 43  | 47     | 51     | 55     |  |  |  |
|                   | A341     | SLV CAP HEIGHT-DEV ONLY                           |         |         |        |                  | 5 5/8  |   |        |        |        |  |  |  |
|                   | A341A    | SLV CAP WIDTH AT 3 1/2" FROM SHOULDER PT-DEV ONLY |         |         |        |                  | 4 5/8  |   |        |        |        |  |  |  |
|                   | A000     | MEN'S TALL CONVERSION:                            |         |         |        |                  |        |   |        |        |        |  |  |  |
| P                 | A300 MLG | LEN HPS TO HEM- MN LONG GRADE                     | -1/2    | 1/2     | 29 1/2 | 30               | 30 1/2 | 31 1/4  | 32     | 32 1/2 | 33     |  |  |  |
| P                 | A360-4TW | SLV LEN FROM CB NK-TALL L/SLV                     | -1/2    | 1/2     | 17 3/4 | 18               | 19     | 19 7/8  | 20 7/8 | 21 7/8 | 22 7/8 |  |  |  |

KOHL'S


SP26

Stage: DEVELOPMENT

MS11K200  
THE ESSENTIAL TEE  
Points of Measure

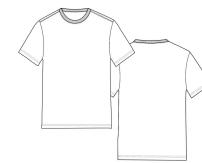


| POM Page Description: |          |   |         | APPAREL.LINKS.B.JERSEY |        |        |               |            |            |            |   |                |            |  |  |
|-----------------------|----------|---|---------|------------------------|--------|--------|---------------|------------|------------|------------|---|----------------|------------|--|--|
| Brand                 | SONOMA   | Division  | MENS    | Customer               | MENS   |        | Tech Designer | ANN MORROW | Business   | SPORTSWEAR |   | Size Indicator | BIG (MENS) |  |  |
| FORM1                 |          | KOS-MMN02XB-2308                                  |         |                        |        | FORM2  |               |            |            |            |   |                |            |  |  |
| Grade Table           |          | BIGMAN TOPS 1XB-4XB                               |         |                        |        |        |               |            |            |            |   |                |            |  |  |
| Material 1            |          | 114060 K 60/40 COTTON/POLYESTER JERSEY 150.00 GM2 |         |                        |        |        |               |            | Material 2 | 90714      | K 60/40 COTTON/POLYESTER SINGLE-JERSEY 150.00 GM2 |                |            |  |  |
| P/S                   | POM Code | POM Description                                   | TOL (-) | TOL (+)                | 1XB    | 2XB    | 3XB           | 4XB        | 5XB        | 6XB        |   |                |            |  |  |
|                       | A000     | BIG MAN CONVERSION USED                           |         |                        |        |        |               |            |            |            |   |                |            |  |  |
| P                     | A122     | MINIMUM HEAD STRETCH                              | 0       | 0                      | 25     | 25     | 25            | 25         | 25         | 25         |   |                |            |  |  |
| P                     | A300     | LEN HPS TO HEM                                    | -1/2    | 1/2                    | 32 1/2 | 33 1/2 | 34 1/2        | 35 1/2     | 36 1/2     | 37 1/2     |   |                |            |  |  |
|                       | A151     | FORWARD SHLDR SEAM @HPS-STRAIGHT                  | -1/8    | 1/8                    |        | 3/4    |               |            |            |            |   |                |            |  |  |
| P                     | A100     | NK WIDTH@SEAM                                     | -1/4    | 1/4                    | 8 1/4  | 8 1/2  | 8 3/4         | 9          | 9 1/4      | 9 1/2      |   |                |            |  |  |
| P                     | A110     | FRT NK DROP@SEAM                                  | -1/8    | 1/8                    | 5      | 5 1/8  | 5 1/4         | 5 3/8      | 5 1/2      | 5 5/8      |   |                |            |  |  |
|                       | A120     | BK NK DROP@SEAM                                   | -1/8    | 1/8                    | 1 1/8  | 1 1/8  | 1 1/4         | 1 1/4      | 1 3/8      | 1 3/8      |   |                |            |  |  |
|                       | A124     | NK TRIM HEIGHT                                    | -1/8    | 1/8                    | 5/8    | 5/8    | 5/8           | 5/8        | 5/8        | 5/8        |   |                |            |  |  |
| P                     | A250     | ACROSS SHOULDER                                   | -3/8    | 3/8                    | 19 3/8 | 20 3/8 | 21 3/8        | 22 3/8     | 23 3/8     | 24 3/8     |   |                |            |  |  |
|                       | A253     | XFRONT/BK PLCMT # FM HPS                          | 0       | 0                      | 8 1/2  | 8 3/4  | 9             | 9 1/4      | 9 1/2      | 9 3/4      |   |                |            |  |  |
|                       | A254     | ACROSS FRONT                                      | -3/8    | 3/8                    | 17 1/2 | 18 1/2 | 19 1/2        | 20 1/2     | 21 1/2     | 22 1/2     |   |                |            |  |  |
|                       | A255     | ACROSS BACK                                       | -3/8    | 3/8                    | 18 1/4 | 19 1/4 | 20 1/4        | 21 1/4     | 22 1/4     | 23 1/4     |   |                |            |  |  |
| P                     | A260H    | CHEST 1" BLW AH RLXD-1/2 MEAS                     | -1/2    | 1/2                    | 25 1/2 | 27 1/2 | 29 1/2        | 31 1/2     | 33 1/2     | 35 1/2     |   |                |            |  |  |
| P                     | A290H    | SWEEEP RLXD@HEM-1/2 MEAS                          | -1/2    | 1/2                    | 25     | 27     | 29            | 31         | 33         | 35         |   |                |            |  |  |
|                       | A568     | BTTM HEM HGHT                                     | -1/8    | 1/8                    | 3/4    | 3/4    | 3/4           | 3/4        | 3/4        | 3/4        |   |                |            |  |  |
| P                     | A330     | ARMHOLE DROP-FROM HPS                             | -1/4    | 1/4                    | 11 5/8 | 11 7/8 | 12 1/8        | 12 3/8     | 12 5/8     | 12 7/8     |   |                |            |  |  |
| P                     | A360-1B  | SLV LEN FROM CB NK-S/SLV                          | -1/4    | 1/4                    | 20 1/8 | 21     | 21 7/8        | 22 5/8     | 23 3/8     | 24         |   |                |            |  |  |
|                       | A352H-1B | SLV OPENING RLXD-1/2 MEAS S/SLV                   | -1/4    | 1/4                    | 7 7/8  | 8 1/4  | 8 5/8         | 9          | 9 3/8      | 9 3/4      |   |                |            |  |  |
|                       | A359     | SLV HEM HGHT                                      | -1/8    | 1/8                    | 3/4    | 3/4    | 3/4           | 3/4        | 3/4        | 3/4        |   |                |            |  |  |
|                       | A010     | DEVELOPMENT ONLY                                  |         |                        |        |        |               |            |            |            |   |                |            |  |  |
|                       | A150     | SHLDR SLOPE - DEV ONLY                            | 0       | 0                      |        | 1 7/8  |               |            |            |            |   |                |            |  |  |
|                       | A341     | SLV CAP HEIGHT-DEV ONLY                           |         |                        |        | 6 3/4  |               |            |            |            |   |                |            |  |  |

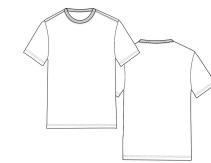**KOHL'S****SP26****Stage: DEVELOPMENT****MS11K200  
THE ESSENTIAL TEE  
Points of Measure**

| FORM1 | KOS-MMN02XB-2308 | FORM2 |  |
|-------|------------------|-------|--|
|-------|------------------|-------|--|

| Grade Table |          | Material 1 114060 K 60/40 COTTON/POLYESTER JERSEY 150.00 GM2 |         |         |     |       |     |     |     | Material 2 90714 K 60/40 COTTON/POLYESTER SINGLE-JERSEY 150.00 GM2 |  |  |  |  |  |  |  |
|-------------|----------|--|---------|---------|-----|-------|-----|-----|-----|--|--|--|--|--|--|--|--|
| P/S         | POM Code | POM Description  | TOL (-) | TOL (+) | 1XB | 2XB   | 3XB | 4XB | 5XB | 6XB  |  |  |  |  |  |  |  |
|             | A341A    | SLV CAP WIDTH AT 4" FROM SHOULDER PT-DEV ONLY                |         |         |     | 5 3/4 |     |     |     |  |  |  |  |  |  |  |  |

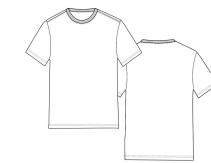

|                |        |              |      |                 |                |             |                 |               |            |
|----------------|--------|--------------|------|-----------------|----------------|-------------|-----------------|---------------|------------|
| Brand          | SONOMA | Division     | MENS | Request No.     | 00750638       | Create Date | 2025-05-06      | Cut Date      |            |
| X-Factory Date |        | Product Type | TOPS | Product Manager | BRANT HOFFMANN | Designer    | LILLIAN BENITEZ | Tech Designer | ANN MORROW |

### Men's Tops Trim Requirements

\*\*\* Samples are subject to rejection if below requirements are not met\*\*\*

#### INTERLINING:

Must be sourced from a Kohl's Preferred Supplier.

\*\*PLS NOTE: KTD may solicit/require different interlining quality based on fabric weight.  
Pls refer to the Design Intent Page for specific call-out (if applicable). \*\*\*

POLOS (All Fabrications): KKN-FMW-PR

RUMPLED PLACKET POLOS: Use interlining specified on Ruffled Placket Constructions Page.

FLEECE/MICRO-FLEECE: KKN-FMW-PR

NON-FUSED CASUAL CTTN/CTTN BLEND WOVEN FABRICS: Woven Sew-In KNW-S08

SOFT NON-FUSED CASUAL CTTN/CTTN BLEND WOVEN FABRICS: Woven Sew-In KNW-S08

POLYNOSIC WOVEN FABRICS: Woven Fusible KWV-F09B

SOFT FUSED CASUAL COTTON/COTTON BLEND WOVEN FABRICS: KWV-F08B

FUSED DRESSY CASUALS: \*\*Kohl's TD will specify which styles are Fused Dressy Casuals\*\*

Use Woven Fusibles - Collar Full Ply: KWV-F09

FULL PATCH: KWV-F09B

BAND/CNTRFRNT/CUFFS: KNW-FXWB

#### KNIT INTERLINING LOCATION:

Applied Placket - Fused to top and bottom layer of plackets

Continuous Placket - Fused to bottom layer of upper placket and both layers of under placket

Fused to top and bottom layer of self collars

Fused to bottom layer of CF Facing

Reinforcement for Grommets/Buttonholes/Snaps/Patch Pocket Corners/Patch Pocket Flap Corners/Pocket Welts

\*\*Additional reinforcement may be needed for 1-ply application. EX: Self fabric patch, plastic spacer, etc.\*\*

#### KNIT Interlining Cut Direction:

Cut warp yarn parallel w/wale in knit, unless otherwise specified.

#### WOVEN INTERLINING LOCATION:

Face side collar & stand - cut on 45 degree bias

Face side cuffs, flaps, upper center placket for btt placket, full collar patch - cut straight on grain

Snap Plackets - Upper & Lower Center placket - cut straight on grain

#### WOVEN THREAD SELECTION:

Must be sourced from Kohl's Preferred Suppliers - Using global approved brand named quality thread requirements.

THREAD QUALITY: Needle/Bobbin/CS & Overlock Looper: Poly Wrap Poly Core

THREAD SIZE: If not specified on Tech Spec, Needle/Bobbin =T-24, 12-14 SPI

If Tex 60 or higher is required, Spun Poly is acceptable, Bobbin Tex should be half the Tex size of the upper thread.

SPI for Tex 60 or higher is 8-10 SPI (or as specified on the Construction Detail page.)


**SNAPS (IF STYLING REQUIRES):** Set after Garment Wash

| WOVENS   |   |
|--|---|
| Button/Snap Quantity Standards<br>*total is for CF placket, including the collar stand (if applicable) |   |
| Mens   | 7 |
| Big or Tall sizes  | 8 |


Updated 5/2/23 - KL

| A&E BRAND NAME   | DESCRIPTION                       |
|------------------|-----------------------------------|
| PERMA CORE       | POLYESTER WRAPPED, POLYESTER CORE |
| D-CORE           | COTTON WRAPPED, POLYESTER CORE    |
| PERMA SPUN       | SPUN POLYESTER                    |
| WILDCAT PLUS     | TEXTURED POLYESTER                |
| COATS BRAND NAME | DESCRIPTION                       |
| EPIC             | POLYESTER WRAPPED, POLYESTER CORE |
| DUAL DUTY        | COTTON WRAPPED, POLYESTER CORE    |
| ASTRA            | SPUN POLYESTER                    |
| GRAMAX           | TEXTURED POLYESTER                |

\*Can use other Kohl's Preferred Suppliers for thread - Need to use globally approved quality

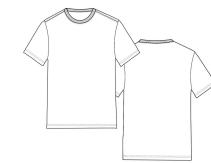**KOHL'S****SP26****Stage: DEVELOPMENT****MS11K200  
THE ESSENTIAL TEE  
Attachments**

|                       |        |                     |      |                        |                |                    |                 |                      |            |
|-----------------------|--------|---------------------|------|------------------------|----------------|--------------------|-----------------|----------------------|------------|
| <b>Brand</b>          | SONOMA | <b>Division</b>     | MENS | <b>Request No.</b>     | 00750638       | <b>Create Date</b> | 2025-05-06      | <b>Cut Date</b>      |            |
| <b>X-Factory Date</b> |        | <b>Product Type</b> | TOPS | <b>Product Manager</b> | BRANT HOFFMANN | <b>Designer</b>    | LILLIAN BENITEZ | <b>Tech Designer</b> | ANN MORROW |

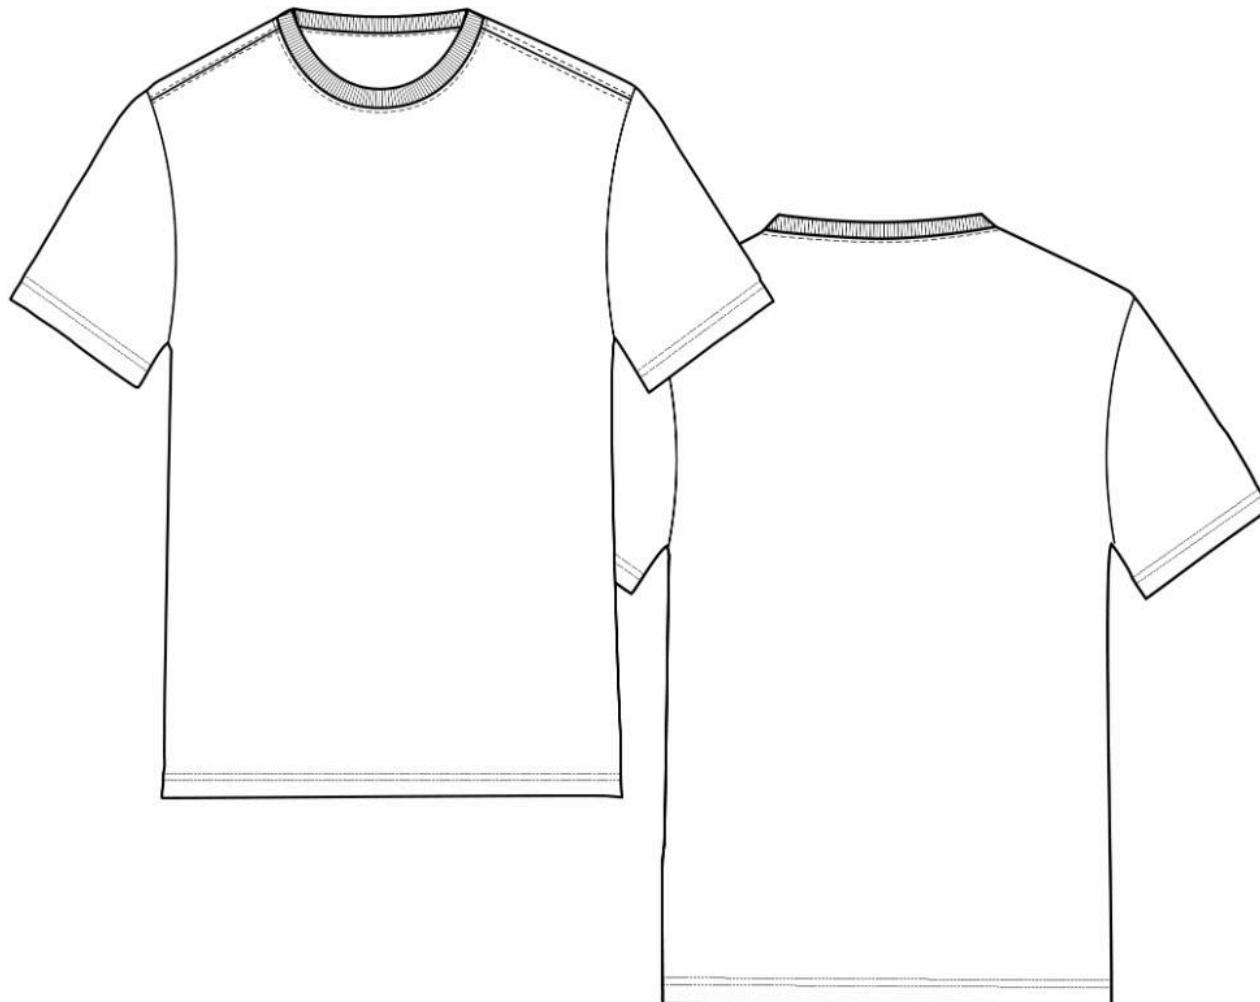

KOHL'S


SP26

Stage: DEVELOPMENT

MS11K200

THE ESSENTIAL TEE

Fit Eval - Spec

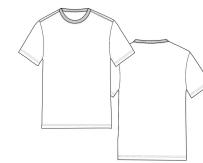

Fit Eval No: 182356

|                       |                        |  |  |  |  |  |  |  |
|-----------------------|------------------------|--|--|--|--|--|--|--|
| POM Page Description: | APPAREL.LINKS.B.JERSEY |  |  |  |  |  |  |  |
|-----------------------|------------------------|--|--|--|--|--|--|--|

|               |               |               |                     |                |                 |                 |                |                |            |
|---------------|---------------|---------------|---------------------|----------------|-----------------|-----------------|----------------|----------------|------------|
| Fiscal Season | SP26          | Brand         | SONOMA              | Division       | MENS            | Customer        | MENS           | Created On     | 2025-08-11 |
| Request No    | 00750638      | Tech Designer | ANN MORROW          | Designer       | LILLIAN BENITEZ | Product Manager | BRANT HOFFMANN | Size Indicator | BIG (MENS) |
| Agent         | KOHL'S DIRECT | Vendor        | APPAREL LINKS, S.A. | Workflow Alert | 85.000000       | PP Deadline     | 10/31/2025     |                |            |

| Sample Information |          |  |            |  |                       |     | Fit Approved        |            |   | PENDING |  |  |
|--------------------|----------|--|------------|--|-----------------------|-----|---------------------|------------|---|---------|--|--|
| Sample Round       | Sample 2 | Sample Type                                | FIT SAMPLE |  | Fit Sample Size       | 2XB | Sample Request Date | 08/11/2025 | Date Received                                     |         |  |  |
| Date Fit           |          | Fit With                                   |            |  | Fit Session Attendees |     | Sample Status       | NEW        | Decision Status Date                              |         |  |  |
| Material 1         | 114060   | K 60/40 COTTON/POLYESTER JERSEY 150.00 GM2 |            |  |                       |     | Material 2          | 90714      | K 60/40 COTTON/POLYESTER SINGLE-JERSEY 150.00 GM2 |         |  |  |

| Code     | Description                                   |  | Tol(-) | Tol(+) | Spec   | Measurer 1 Actuals | Measurer 1 Delta | Meas 1 Comments | Measurer 2 Actuals | Measurer 2 Delta | Meas 2 Comments | Rev |
|----------|---|--|--------|--------|--------|--------------------|------------------|-----------------|--------------------|------------------|-----------------|-----|
| A000     | BIG MAN CONVERSION USED                       |  |        |        |        |                    |                  |                 |                    |                  |                 |     |
| A122     | MINIMUM HEAD STRETCH                          |  | 0      | 0      | 25     |                    |                  |                 |                    |                  |                 |     |
| A300     | LEN HPS TO HEM                                |  | -1/2   | 1/2    | 33 1/2 |                    |                  |                 |                    |                  |                 |     |
| A151     | FORWARD SHLDR SEAM @HPS-STRAIGHT              |  | -1/8   | 1/8    | 3/4    |                    |                  |                 |                    |                  |                 |     |
| A100     | NK WIDTH@SEAM                                 |  | -1/4   | 1/4    | 8 1/2  |                    |                  |                 |                    |                  |                 |     |
| A110     | FRT NK DROP@SEAM                              |  | -1/8   | 1/8    | 5 1/8  |                    |                  |                 |                    |                  |                 |     |
| A120     | BK NK DROP@SEAM                               |  | -1/8   | 1/8    | 1 1/8  |                    |                  |                 |                    |                  |                 |     |
| A124     | NK TRIM HEIGHT                                |  | -1/8   | 1/8    | 5/8    |                    |                  |                 |                    |                  |                 |     |
| A250     | ACROSS SHOULDER                               |  | -3/8   | 3/8    | 20 3/8 |                    |                  |                 |                    |                  |                 |     |
| A253     | XFRT/BK PLCMT # FM HPS                        |  | 0      | 0      | 8 3/4  |                    |                  |                 |                    |                  |                 |     |
| A254     | ACROSS FRONT                                  |  | -3/8   | 3/8    | 18 1/2 |                    |                  |                 |                    |                  |                 |     |
| A255     | ACROSS BACK                                   |  | -3/8   | 3/8    | 19 1/4 |                    |                  |                 |                    |                  |                 |     |
| A260H    | CHEST 1" BLW AH RLXD-1/2 MEAS                 |  | -1/2   | 1/2    | 27 1/2 |                    |                  |                 |                    |                  |                 |     |
| A290H    | SWEEP RLXD@HEM-1/2 MEAS                       |  | -1/2   | 1/2    | 27     |                    |                  |                 |                    |                  |                 |     |
| A568     | BTTM HEM HGHT                                 |  | -1/8   | 1/8    | 3/4    |                    |                  |                 |                    |                  |                 |     |
| A330     | ARMHOLE DROP-FROM HPS                         |  | -1/4   | 1/4    | 11 7/8 |                    |                  |                 |                    |                  |                 |     |
| A360-1B  | SLV LEN FROM CB NK-S/SLV                      |  | -1/4   | 1/4    | 21     |                    |                  |                 |                    |                  |                 |     |
| A352H-1B | SLV OPENING RLXD-1/2 MEAS S/SLV               |  | -1/4   | 1/4    | 8 1/4  |                    |                  |                 |                    |                  |                 |     |
| A359     | SLV HEM HGHT                                  |  | -1/8   | 1/8    | 3/4    |                    |                  |                 |                    |                  |                 |     |
| A010     | DEVELOPMENT ONLY                              |  |        |        |        |                    |                  |                 |                    |                  |                 |     |
| A150     | SHLDR SLOPE - DEV ONLY                        |  | 0      | 0      | 1 7/8  |                    |                  |                 |                    |                  |                 |     |
| A341     | SLV CAP HEIGHT-DEV ONLY                       |  |        |        | 6 3/4  |                    |                  |                 |                    |                  |                 |     |
| A341A    | SLV CAP WIDTH AT 4" FROM SHOULDER PT-DEV ONLY |  |        |        | 5 3/4  |                    |                  |                 |                    |                  |                 |     |

KOHL'S


SP26

Stage: DEVELOPMENT

MS11K200

THE ESSENTIAL TEE

Fit Eval - Spec

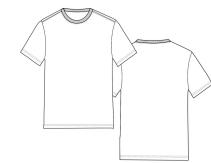


Fit Eval No: 182356

|                       |                        |  |  |  |  |  |  |  |
|-----------------------|------------------------|--|--|--|--|--|--|--|
| POM Page Description: | APPAREL.LINKS.B.JERSEY |  |  |  |  |  |  |  |
|-----------------------|------------------------|--|--|--|--|--|--|--|

|               |               |               |                     |                |                 |                 |                |                |            |
|---------------|---------------|---------------|---------------------|----------------|-----------------|-----------------|----------------|----------------|------------|
| Fiscal Season | SP26          | Brand         | SONOMA              | Division       | MENS            | Customer        | MENS           | Created On     | 2025-08-11 |
| Request No    | 00750638      | Tech Designer | ANN MORROW          | Designer       | LILLIAN BENITEZ | Product Manager | BRANT HOFFMANN | Size Indicator | BIG (MENS) |
| Agent         | KOHL'S DIRECT | Vendor        | APPAREL LINKS, S.A. | Workflow Alert | 85.000000       | PP Deadline     | 10/31/2025     |                |            |

| Sample Information |          |  |                |                       |                                 | Fit Approved        |               | PENDING   |            |
|--------------------|----------|--|----------------|-----------------------|---------------------------------|---------------------|---------------|---|------------|
| Sample Round       | Sample 1 | Sample Type                                | COUNTER SAMPLE | Fit Sample Size       | 2XB                             | Sample Request Date | 08/11/2025    | Date Received                                     | 08/07/2025 |
| Date Fit           |          | Fit With                                   |                | Fit Session Attendees | C/O - NO SAMPLE<br>*DSO @ ASHO* | Sample Status       | NOT EVALUATED | Decision Status Date                              | 08/11/2025 |
| Material 1         | 114060   | K 60/40 COTTON/POLYESTER JERSEY 150.00 GM2 |                |                       |                                 | Material 2          | 90714         | K 60/40 COTTON/POLYESTER SINGLE-JERSEY 150.00 GM2 |            |

| Code     | Description                                   | Tol(-) | Tol(+) | Spec   | Measurer 1 Actuals | Measurer 1 Delta | Meas 1 Comments | Measurer 2 Actuals | Measurer 2 Delta | Meas 2 Comments | Rev |
|----------|---|--------|--------|--------|--------------------|------------------|-----------------|--------------------|------------------|-----------------|-----|
| A000     | BIG MAN CONVERSION USED                       |        |        |        |                    |                  |                 |                    |                  |                 |     |
| A122     | MINIMUM HEAD STRETCH                          | 0      | 0      | 25     |                    |                  |                 |                    |                  |                 |     |
| A300     | LEN HPS TO HEM                                | -1/2   | 1/2    | 33 1/2 |                    |                  |                 |                    |                  |                 |     |
| A151     | FORWARD SHLDR SEAM @HPS-STRAIGHT              | -1/8   | 1/8    | 3/4    |                    |                  |                 |                    |                  |                 |     |
| A100     | NK WIDTH@SEAM                                 | -1/4   | 1/4    | 8 1/2  |                    |                  |                 |                    |                  |                 |     |
| A110     | FRT NK DROP@SEAM                              | -1/8   | 1/8    | 5 1/8  |                    |                  |                 |                    |                  |                 |     |
| A120     | BK NK DROP@SEAM                               | -1/8   | 1/8    | 1 1/8  |                    |                  |                 |                    |                  |                 |     |
| A124     | NK TRIM HEIGHT                                | -1/8   | 1/8    | 5/8    |                    |                  |                 |                    |                  |                 |     |
| A250     | ACROSS SHOULDER                               | -3/8   | 3/8    | 20 3/8 |                    |                  |                 |                    |                  |                 |     |
| A253     | XFRONT/BK PLCMT # FM HPS                      | 0      | 0      | 8 3/4  |                    |                  |                 |                    |                  |                 |     |
| A254     | ACROSS FRONT                                  | -3/8   | 3/8    | 18 1/2 |                    |                  |                 |                    |                  |                 |     |
| A255     | ACROSS BACK                                   | -3/8   | 3/8    | 19 1/4 |                    |                  |                 |                    |                  |                 |     |
| A260H    | CHEST 1" BLW AH RLXD-1/2 MEAS                 | -1/2   | 1/2    | 27 1/2 |                    |                  |                 |                    |                  |                 |     |
| A290H    | SWEET RLXD@HEM-1/2 MEAS                       | -1/2   | 1/2    | 27     |                    |                  |                 |                    |                  |                 |     |
| A568     | BTTM HEM HGBT                                 | -1/8   | 1/8    | 3/4    |                    |                  |                 |                    |                  |                 |     |
| A330     | ARMHOLE DROP-FROM HPS                         | -1/4   | 1/4    | 11 7/8 |                    |                  |                 |                    |                  |                 |     |
| A360-1B  | SLV LEN FROM CB NK-S/SLV                      | -1/4   | 1/4    | 21     |                    |                  |                 |                    |                  |                 |     |
| A352H-1B | SLV OPENING RLXD-1/2 MEAS S/SLV               | -1/4   | 1/4    | 8 1/4  |                    |                  |                 |                    |                  |                 |     |
| A359     | SLV HEM HGBT                                  | -1/8   | 1/8    | 3/4    |                    |                  |                 |                    |                  |                 |     |
| A010     | DEVELOPMENT ONLY                              |        |        |        |                    |                  |                 |                    |                  |                 |     |
| A150     | SHLDR SLOPE - DEV ONLY                        | 0      | 0      | 1 7/8  |                    |                  |                 |                    |                  |                 |     |
| A341     | SLV CAP HEIGHT-DEV ONLY                       |        |        | 6 3/4  |                    |                  |                 |                    |                  |                 |     |
| A341A    | SLV CAP WIDTH AT 4" FROM SHOULDER PT-DEV ONLY |        |        | 5 3/4  |                    |                  |                 |                    |                  |                 |     |

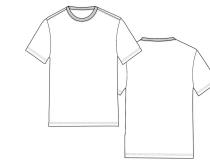

## Measurer 1 Fit Comments

## Measurer 2 Fit Comments

Date: 8/11/25  
Sample Type: Counter  
Sample Color: N/A  
KTD: Ann Morrow

KTD FIT EVAL STATUS:  
NOT EVALUATED- No Counter sample was received or required.  
\*Due to Large Program Size - CTD level 3 or 4 to make a fit approval on behalf of Kohl's\*  
1st fit sample should be made based on FA25 Fit Approval of MS11K200 within 7-10 business days of Decision Status Date.  
Submit a fit sample for approval to CTD level 3 or 4 within 7-10 business days of Decision Status Date.  
Once FIT APPROVED -  
A Pre-Production sample is required to be documented, reviewed, and approved by CTD in OnePLM before production can begin.  
Submit a Pre-Production sample to Kohls TD for records.  
If additional fabric choices are added to this base style, confirm fit approval status for additional choices with Kohls TD.  
Large Buy Key Item: Submit TOP sample in Base Size for Core Essential Programs for Kohls TD for Reference

Best Regards,  
KTD Ann Morrow

KOHL'S


SP26

Stage: DEVELOPMENT

MS11K200

THE ESSENTIAL TEE

Fit Eval - Spec

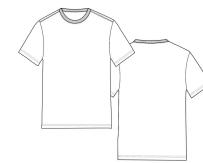

Fit Eval No: 180892

|                       |                        |  |  |  |  |  |  |  |
|-----------------------|------------------------|--|--|--|--|--|--|--|
| POM Page Description: | APPAREL.LINKS.R.JERSEY |  |  |  |  |  |  |  |
|-----------------------|------------------------|--|--|--|--|--|--|--|

|               |               |               |                     |                |                 |                 |                |                |            |
|---------------|---------------|---------------|---------------------|----------------|-----------------|-----------------|----------------|----------------|------------|
| Fiscal Season | SP26          | Brand         | SONOMA              | Division       | MENS            | Customer        | MENS           | Created On     | 2025-06-05 |
| Request No    | 00750638      | Tech Designer | ANN MORROW          | Designer       | LILLIAN BENITEZ | Product Manager | BRANT HOFFMANN | Size Indicator | REGULAR    |
| Agent         | KOHL'S DIRECT | Vendor        | APPAREL LINKS, S.A. | Workflow Alert | 85.000000       | PP Deadline     | 10/31/2025     |                |            |

| Sample Information |            |  |            |                       |    |  | Fit Approved        |            | YES   |            |  |
|--------------------|------------|--|------------|-----------------------|----|--|---------------------|------------|---|------------|--|
| Sample Round       | Sample 2   | Sample Type                                | FIT SAMPLE | Fit Sample Size       | 40 |  | Sample Request Date | 08/11/2025 | Date Received                                     | 08/21/2025 |  |
| Date Fit           | 08/22/2025 | Fit With                                   |            | Fit Session Attendees |    |  | Sample Status       | APPROVED   | Decision Status Date                              | 08/27/2025 |  |
| Material 1         | 114060     | K 60/40 COTTON/POLYESTER JERSEY 150.00 GM2 |            |                       |    |  | Material 2          | 90714      | K 60/40 COTTON/POLYESTER SINGLE-JERSEY 150.00 GM2 |            |  |

| Code          | Description  | Tol(-) | Tol(+) | Spec   | Measurer 1 Actuals | Measurer 1 Delta | Meas 1 Comments | Measurer 2 Actuals | Measurer 2 Delta | Meas 2 Comments | Rev |
|---------------|--|--------|--------|--------|--------------------|------------------|-----------------|--------------------|------------------|-----------------|-----|
| A001-MNT-3PRG | MENS 3" PRG ALPHA XS=34, S=36, M=40, L=43, XL=47, 2XL=51, 3XL=55 |        |        |        |                    |                  |                 |                    |                  |                 |     |
| A122          | MINIMUM HEAD STRETCH   | 0      |        | 25     | 25                 | 0                |                 |                    |                  |                 |     |
| A300          | LEN HPS TO HEM   | -1/2   | 1/2    | 28 1/2 | 28 1/4             | -1/4             |                 |                    |                  |                 |     |
| A151          | FORWARD SHLDR SEAM @HPS-STRAIGHT-DEV ONLY                        | -1/8   | 1/8    | 1/2    | 1/2                | 0                |                 |                    |                  |                 |     |
| A100          | NK WIDTH@SEAM  | -1/4   | 1/4    | 7      | 6 7/8              | -1/8             |                 |                    |                  |                 |     |
| A110          | FRT NK DROP@SEAM   | -1/8   | 1/8    | 4 5/8  | 4 1/2              | -1/8             |                 |                    |                  |                 |     |
| A120          | BK NK DROP@SEAM  | -1/8   | 1/8    | 7/8    | 7/8                | 0                |                 |                    |                  |                 |     |
| A124          | NK TRIM HGT  | -1/8   | 1/8    | 5/8    | 5/8                | 0                |                 |                    |                  |                 |     |
| A250          | ACROSS SHOULDER  | -3/8   | 3/8    | 17 3/4 | 18                 | 1/4              |                 |                    |                  |                 |     |
| A253          | XFRONT/BK PLCMT # FM HPS   | 0      | 0      | 7 1/2  | 7 1/2              | 0                |                 |                    |                  |                 |     |
| A254          | ACROSS FRONT   | -3/8   | 3/8    | 15 1/2 | 15 5/8             | 1/8              |                 |                    |                  |                 |     |
| A255          | ACROSS BACK  | -3/8   | 3/8    | 16 1/2 | 16 1/2             | 0                |                 |                    |                  |                 |     |
| A260H         | CHEST 1" BLW AH RLXD-1/2 MEAS                                    | -1/2   | 1/2    | 20 1/2 | 20 5/8             | 1/8              |                 |                    |                  |                 |     |
| A290H         | SWEET RLXD@HEM-1/2 MEAS  | -1/2   | 1/2    | 20 1/2 | 20 5/8             | 1/8              |                 |                    |                  |                 |     |
| A568          | BTTM HEM HGBT  | -1/8   | 1/8    | 3/4    | 3/4                | 0                |                 |                    |                  |                 |     |
| A330          | ARMHOLE DROP-FROM HPS  | -1/4   | 1/4    | 10 3/4 | 10 3/4             | 0                |                 |                    |                  |                 |     |
| A360-1B       | SLV LEN FROM CB NK-S/SLV   | -1/4   | 1/4    | 17 1/2 | 17 1/2             | 0                |                 |                    |                  |                 |     |
| A352H-1B      | SLV OPENING RLXD-1/2 MEAS S/SLV                                  | -1/4   | 1/4    | 7      | 7 1/8              | 1/8              |                 |                    |                  |                 |     |
| A359          | SLV HEM HGBT   | -1/8   | 1/8    | 3/4    | 3/4                | 0                |                 |                    |                  |                 |     |
| A010          | DEVELOPMENT ONLY   |        |        |        |                    |                  |                 |                    |                  |                 |     |
| A150          | SHLDR SLOPE - DEV ONLY   | -1/8   | 1/8    | 2      | 2                  | 0                |                 |                    |                  |                 |     |
| A341          | SLV CAP HEIGHT-DEV ONLY  |        |        | 5 5/8  | 5 5/8              | 0                |                 |                    |                  |                 |     |
| A341A         | SLV CAP WIDTH AT 3 1/2" FROM SHOULDER PT-DEV ONLY                |        |        | 4 5/8  | 4 5/8              | 0                |                 |                    |                  |                 |     |

KOHL'S


SP26

Stage: DEVELOPMENT

MS11K200


THE ESSENTIAL TEE

Fit Eval - Spec

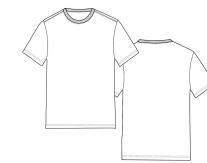**Sample Information**

|              |            |  |            |  |                       |       |   |            |     |                      |            |
|--------------|------------|--|------------|--|-----------------------|-------|---|------------|-----|----------------------|------------|
|              |            |  |            |  |                       |       | Fit Approved                                      |            | YES |                      |            |
| Sample Round | Sample 2   | Sample Type                                | FIT SAMPLE |  | Fit Sample Size       | 40    | Sample Request Date                               | 08/11/2025 |     | Date Received        | 08/21/2025 |
| Date Fit     | 08/22/2025 | Fit With                                   |            |  | Fit Session Attendees |       | Sample Status                                     | APPROVED   |     | Decision Status Date | 08/27/2025 |
| Material 1   | 114060     | K 60/40 COTTON/POLYESTER JERSEY 150.00 GM2 |            |  | Material 2            | 90714 | K 60/40 COTTON/POLYESTER SINGLE-JERSEY 150.00 GM2 |            |     |                      |            |

| Code     | Description                   | Tol(-) | Tol(+) | Spec   | Measurer 1 Actuals | Measurer 1 Delta | Meas 1 Comments | Measurer 2 Actuals | Measurer 2 Delta | Meas 2 Comments | Rev |
|----------|-------------------------------|--------|--------|--------|--------------------|------------------|-----------------|--------------------|------------------|-----------------|-----|
| A000     | MEN'S TALL CONVERSION:        |        |        |        |                    |                  |                 |                    |                  |                 |     |
| A300 MLG | LEN HPS TO HEM- MN LONG GRADE | -1/2   | 1/2    | 30 1/2 |                    |                  |                 |                    |                  |                 |     |
| A360-4TW | SLV LEN FROM CB NK-TALL L/SLV | -1/2   | 1/2    | 19     |                    |                  |                 |                    |                  |                 |     |

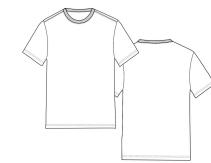**Measurer 1 Fit Comments****Measurer 2 Fit Comments**

Date: 8/26/2025  
Sample Type: FIT SAMPLE  
Sample Color: MINERAL NAVY  
Vendor, CTD Name, Kohl's CTD Level>Title: HELEN MOISES LEVEL 3  
Factory Name: JS INTERNATIONAL, S.A.

COP: Guatemala  
UNITS: Less than 5k, 5k-150k, 150K+-300KOR Greater Than 300k

CTD FIT EVAL STATUS: FIT APPROVED by CTD- Follow Below Comments for Corrections. A Pre-Production sample is required to be documented, reviewed, and approved by CTD in OnePLM before production can begin. Submit a Pre-Production sample to Kohl's TD for records.

**STYLE/FABRIC INFO**

Fabric 1: 60/40 COTTON/POLYESTER...150G/M2 (#78049) Textiles Sola Fe, S.A.

**Trim info**

Thread Spun poly TEX 27 from YOUN KWANG

Tracking Label (UPC): Brand & Trims

Heat Transfer, Care Label from r-pac

Fit Sample Label Attachment: Label placement is according to the On-Garment guide, the label is properly applied, and the Brand is visible.

**PATTERNS:** Uploaded Fit sample patterns to the Fit Eval Page in one PLM

F1-SP26-MS11K200R-JSY-N-INT

**GENERAL COMMENTS:**

See comments and photos attached.

**CONSTRUCTION COMMENTS:**

1. Garment construction details are matched with the DI page.
2. Heat-seal label/ Care & UPC labels are actual. The placements are correct.
3. Neck trim is slightly off shade compared to the body. Please match the trim color to the body with the PP sample.
4. Maintain stitch tension as the sample.


**FIT COMMENTS:**

1. Ref pattern used: REG SIZE REFERENCE PATTERN: P1-FA24-MS11K200R-JSY-N-INT
2. Garment measured within tolerance, please maintain.
3. Garment Fit and balance look good on the dress form.

KOHL'S

SP26  
Stage: DEVELOPMENT

MS11K200  
THE ESSENTIAL TEE  
Fit Eval - Spec

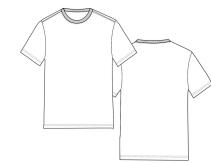

FA26 – MS11K200R

Fit Sample

JS INTERNATIONAL

HPS Fold line meas @ forward dress form shoulder seam



08/21/2025

Guatemala INT S.A.

By : Helen (Entry CTD)

KOHL'S


SP26

Stage: DEVELOPMENT

MS11K200

THE ESSENTIAL TEE

Fit Eval - Spec

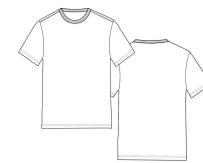

Fit Eval No: 180892

|                       |                        |  |  |  |  |  |  |  |
|-----------------------|------------------------|--|--|--|--|--|--|--|
| POM Page Description: | APPAREL.LINKS.R.JERSEY |  |  |  |  |  |  |  |
|-----------------------|------------------------|--|--|--|--|--|--|--|

|               |               |               |                     |                |                 |                 |                |                |            |
|---------------|---------------|---------------|---------------------|----------------|-----------------|-----------------|----------------|----------------|------------|
| Fiscal Season | SP26          | Brand         | SONOMA              | Division       | MENS            | Customer        | MENS           | Created On     | 2025-06-05 |
| Request No    | 00750638      | Tech Designer | ANN MORROW          | Designer       | LILLIAN BENITEZ | Product Manager | BRANT HOFFMANN | Size Indicator | REGULAR    |
| Agent         | KOHL'S DIRECT | Vendor        | APPAREL LINKS, S.A. | Workflow Alert | 85.000000       | PP Deadline     | 10/31/2025     |                |            |

| Sample Information  |          |             |                |                       |                              | Fit Approved        |               | PENDING              |            |
|---|----------|-------------|----------------|-----------------------|------------------------------|---------------------|---------------|----------------------|------------|
| Sample Round  | Sample 1 | Sample Type | COUNTER SAMPLE | Fit Sample Size       | 40                           | Sample Request Date | 06/05/2025    | Date Received        | 08/07/2025 |
| Date Fit  |          | Fit With    |                | Fit Session Attendees | NO SAMPLE - C/O *DSO @ ASHO* | Sample Status       | NOT EVALUATED | Decision Status Date | 08/11/2025 |
| Material 1 114060 K 60/40 COTTON/POLYESTER JERSEY 150.00 GM2 Material 2 90714 K 60/40 COTTON/POLYESTER SINGLE-JERSEY 150.00 GM2 |          |             |                |                       |                              |                     |               |                      |            |

| Code          | Description  | Tol(-) | Tol(+) | Spec   | Measurer 1 Actuals | Measurer 1 Delta | Meas 1 Comments | Measurer 2 Actuals | Measurer 2 Delta | Meas 2 Comments | Rev |
|---------------|--|--------|--------|--------|--------------------|------------------|-----------------|--------------------|------------------|-----------------|-----|
| A001-MNT-3PRG | MENS 3" PRG ALPHA XS=34, S=36, M=40, L=43, XL=47, 2XL=51, 3XL=55 |        |        |        |                    |                  |                 |                    |                  |                 |     |
| A122          | MINIMUM HEAD STRETCH   | 0      |        | 25     |                    |                  |                 |                    |                  |                 |     |
| A300          | LEN HPS TO HEM   | -1/2   | 1/2    | 28 1/2 |                    |                  |                 |                    |                  |                 |     |
| A151          | FORWARD SHLDR SEAM @HPS-STRAIGHT-DEV ONLY                        | -1/8   | 1/8    | 1/2    |                    |                  |                 |                    |                  |                 |     |
| A100          | NK WIDTH@SEAM  | -1/4   | 1/4    | 7      |                    |                  |                 |                    |                  |                 |     |
| A110          | FRT NK DROP@SEAM   | -1/8   | 1/8    | 4 5/8  |                    |                  |                 |                    |                  |                 |     |
| A120          | BK NK DROP@SEAM  | -1/8   | 1/8    | 7/8    |                    |                  |                 |                    |                  |                 |     |
| A124          | NK TRIM HGT  | -1/8   | 1/8    | 5/8    |                    |                  |                 |                    |                  |                 |     |
| A250          | ACROSS SHOULDER  | -3/8   | 3/8    | 17 3/4 |                    |                  |                 |                    |                  |                 |     |
| A253          | XFRONT/BK PLCMT # FM HPS   | 0      | 0      | 7 1/2  |                    |                  |                 |                    |                  |                 |     |
| A254          | ACROSS FRONT   | -3/8   | 3/8    | 15 1/2 |                    |                  |                 |                    |                  |                 |     |
| A255          | ACROSS BACK  | -3/8   | 3/8    | 16 1/2 |                    |                  |                 |                    |                  |                 |     |
| A260H         | CHEST 1" BLW AH RLXD-1/2 MEAS                                    | -1/2   | 1/2    | 20 1/2 |                    |                  |                 |                    |                  |                 |     |
| A290H         | SWEEP RLXD@HEM-1/2 MEAS  | -1/2   | 1/2    | 20 1/2 |                    |                  |                 |                    |                  |                 |     |
| A568          | BTTM HEM HGBT  | -1/8   | 1/8    | 3/4    |                    |                  |                 |                    |                  |                 |     |
| A330          | ARMHOLE DROP-FROM HPS  | -1/4   | 1/4    | 10 3/4 |                    |                  |                 |                    |                  |                 |     |
| A360-1B       | SLV LEN FROM CB NK-S/SLV   | -1/4   | 1/4    | 17 1/2 |                    |                  |                 |                    |                  |                 |     |
| A352H-1B      | SLV OPENING RLXD-1/2 MEAS S/SLV                                  | -1/4   | 1/4    | 7      |                    |                  |                 |                    |                  |                 |     |
| A359          | SLV HEM HGBT   | -1/8   | 1/8    | 3/4    |                    |                  |                 |                    |                  |                 |     |
| A010          | DEVELOPMENT ONLY   |        |        |        |                    |                  |                 |                    |                  |                 |     |
| A150          | SHLDR SLOPE - DEV ONLY   | -1/8   | 1/8    | 2      |                    |                  |                 |                    |                  |                 |     |
| A341          | SLV CAP HEIGHT-DEV ONLY  |        |        | 5 5/8  |                    |                  |                 |                    |                  |                 |     |

KOHL'S


SP26

Stage: DEVELOPMENT

MS11K200


THE ESSENTIAL TEE

Fit Eval - Spec

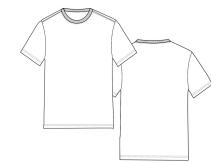

| Sample Information |          |  |                |                       |                                 |            | Fit Approved        |   |                      | PENDING    |  |
|--------------------|----------|--|----------------|-----------------------|---------------------------------|------------|---------------------|---|----------------------|------------|--|
| Sample Round       | Sample 1 | Sample Type                                | COUNTER SAMPLE | Fit Sample Size       | 40                              |            | Sample Request Date | 06/05/2025  | Date Received        | 08/07/2025 |  |
| Date Fit           |          | Fit With                                   |                | Fit Session Attendees | NO SAMPLE - C/O<br>*DSO @ ASHO* |            | Sample Status       | NOT EVALUATED                                     | Decision Status Date | 08/11/2025 |  |
| Material 1         | 114060   | K 60/40 COTTON/POLYESTER JERSEY 150.00 GM2 |                |                       |                                 | Material 2 | 90714               | K 60/40 COTTON/POLYESTER SINGLE-JERSEY 150.00 GM2 |                      |            |  |

| Code     | Description                                       | Tol(-) | Tol(+) | Spec   | Measurer 1 Actuals | Measurer 1 Delta | Meas 1 Comments | Measurer 2 Actuals | Measurer 2 Delta | Meas 2 Comments | Rev |
|----------|---|--------|--------|--------|--------------------|------------------|-----------------|--------------------|------------------|-----------------|-----|
| A341A    | SLV CAP WIDTH AT 3 1/2" FROM SHOULDER PT-DEV ONLY |        |        | 4 5/8  |                    |                  |                 |                    |                  |                 |     |
| A000     | MEN'S TALL CONVERSION:                            |        |        |        |                    |                  |                 |                    |                  |                 |     |
| A300 MLG | LEN HPS TO HEM- MN LONG GRADE                     | -1/2   | 1/2    | 30 1/2 |                    |                  |                 |                    |                  |                 |     |
| A360-4TW | SLV LEN FROM CB NK-TALL L/SLV                     | -1/2   | 1/2    | 19     |                    |                  |                 |                    |                  |                 |     |

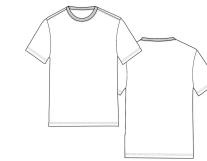

## Measurer 1 Fit Comments

## Measurer 2 Fit Comments

Date: 8/11/25  
Sample Type: Counter  
Sample Color: N/A  
KTD: Ann Morrow

KTD FIT EVAL STATUS:  
NOT EVALUATED- No Counter sample was received or required.  
\*Due to Large Program Size - CTD level 3 or 4 to make a fit approval on behalf of Kohl's\*  
1st fit sample should be made based on FA25 Fit Approval of MS11K200 within 7-10 business days of Decision Status Date.  
Submit a fit sample for approval to CTD level 3 or 4 within 7-10 business days of Decision Status Date.  
Once FIT APPROVED -  
A Pre-Production sample is required to be documented, reviewed, and approved by CTD in OnePLM before production can begin.  
Submit a Pre-Production sample to Kohls TD for records.  
If additional fabric choices are added to this base style, confirm fit approval status for additional choices with Kohls TD.  
Large Buy Key Item: Submit TOP sample in Base Size for Core Essential Programs for Kohls TD for Reference

Best Regards,  
KTD Ann Morrow